



D5-type Remote control duplicator

Copy 2 remote controls just by one


Remain holding button 2 and 3 for more than 2 seconds, the LED flashes in red (or blue), the duplicator is ready to copy another remote control ; repeat holding button 2 and 3, the LED flashes in blue(or red), the duplicator returns to the previous remote control. In a word, use button 2+3 to switch between two remote controls you copied or want to copy. According to the LED color, red or blue, you can distinguish the remote controls copied easily.

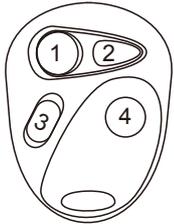

Original remote

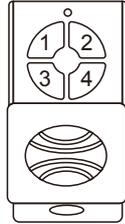

Clone remote

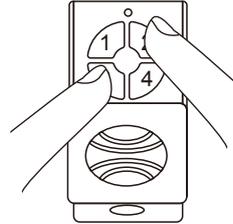


change remote

Here is the way of copy


Memory clearance

- 1.Press button 1 and 2 simultaneous until LED flashes 3 times
- 2.Release button 2 (Keep pressing button 1), and press button 2 slowly for 3 times, LED flashes quickly.
- 3.Release both button, the duplicator is ready for copying

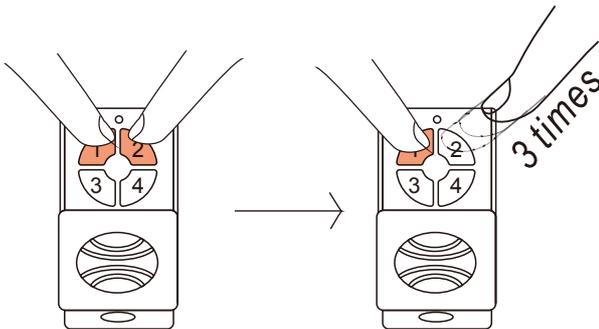

Duplicating

Put duplicator aside of original transmitter, as close as possible.

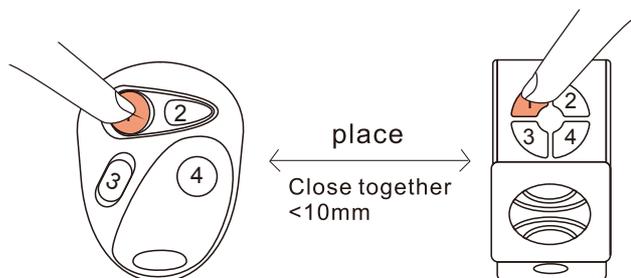

Fixed code remote control:

Press and hold button 1 of original transmitter, then press and hold button 1 of duplicator until you see the duplicator's LED flashes means the duplicating succeed.

Repeat above step to the rest buttons. The duplicator will work after duplicating.

Rolling code remote control:

Press and hold button 1 of original transmitter, then press and hold button 1 of duplicator until you see the duplicator's LED flashes means the duplicating succeed.

Once 1 button duplicated, the rest buttons will generate automatically, please follow original receiver manual to insert the new duplicator on the receiver.

Special programming steps for BFT MITTO2 & MITTO4 (old version)

1, memory clearance

2, Press and hold button 1 of duplicator till LED flashes twice and off, press button 2 once while keep holding button 1, the duplicator into BFT copying mode


3, Press and hold button 1st & 2nd of BFT simultaneous (seed code sending mode), LED on duplicator will flashes twice and off, release both BFT buttons and then press any button of BFT, LED on duplicator will flashes three times then stay on, which indicates BFT copying done.

Remarks: button 1 of duplicator keep pressed from step 2 till 3 done.

Duplicator to send seed code of BFT: Press button 1 & 4 simultaneous.

Resume

If you erase the code by mistake, you can resume it by pressing and hold both of the "3" and "4" button on the remote controllers at the same time, after 10 seconds, the LED flashes 2 times and turn off which indicates the code of the copy remote controller is resumed.

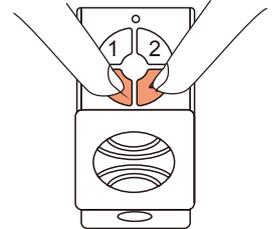

Remarks:

For fixed code & learning code remote controls, the duplicator will work after duplicating.

But for the rolling code brand listed above, please follow the original manual to program the duplicator to receiver after duplicating.

The chipset compability : All of Fixed code and learning code

2260(All the manufacturers)

2262(All the manufacturers)

PT2264,5326(All the manufacturers)

SC5262,HT600,HT680,HT6207,HT6010,HT6012,

HT6014,SMC918 Series,527(All the manufacturers)

1527(All the manufacturers)

2240(All the manufacturers)

Parts of singlechip.... : CAME TOP432NA/EV/EE

Some 433Mhz Brands compatible (rolling code) :

BFT MITTO2 MITTO4 (old version)	FAAC XT4 433RC	MotorLine MX4SP DSM
BENINCA TO GO WV	KEY TXB-42R	DEA MIO TR2
DOORHAN TX4	ATA PTX4	Peccinin TX3C
NICE FLORS	GBD AU1600	Centurion NOVA
V2	Nice-Smilo	AN MOTOR AT-4
NOVOFERM	ROSSI	FADINI JUBI
Hiland	zhongtian	SUPERLIFT s60, s66
AAVAQ	DOORMAN	



BENINCA
ALLMATIC



DOORHAN
TX4



KEY
TXB-42R



GBD
AU1600



Nice-Smilo



DEA



FADINI
JUBI



Novoferm



V2



FAAC
XT4 433



ECA



Motorline
MX4SP DSM



BFT
MITTO2/MITTO4



NICE
FLORS



ATA
PTX-4



Rossi



Peccinin
TX3C



Centurion
NOVA